



ML 92/93

1. If a roll paper stand or a tractor assembly is fitted, remove it. Remove the platen knob and access cover. Undo the two recessed screws in the front corners of the printer case and lift the front of the case, the rear of the case will then come free.
2. If a serial interface board is fitted it will be necessary to remove this by unscrewing the two screws and removing the two cables.
3. Note the location of Q2, Q4, Q5 remove these and replace with the relevant EPROMS.
4. If these EPROMS are to convert the printer to IBM compatibility then the bank of eight switches on the front panel should be set as follows:-
 - SW 1,2,3,4, and 7 OFF
 - SW 5 OFF Form length dial 7 = 11 inches
 - SW 6 OFF No auto line feed.
 - SW 8 Off Parallel interface.
1. Replace the serial interface if fitted (beware of trapping the cables), case, access cover, and platen knob etc.

Notes for all printers

1. Note which end of the EPROM has the indent in it, so the replacement can be aligned the same way.
2. It is strongly recommended that an extractor tool is used to remove the old EPROM. If an extractor is not available then insert a small flat bladed screwdriver under one end of the EPROM and gently ease it upwards, then insert the screwdriver under the other end and ease that end up, repeat until the EPROM is free.
3. When fitting a replacement EPROM ensure all legs are correctly aligned and none are bent when inserted.
4. To avoid static damage to EPROMS anti-static precautions should be taken. If you do not have the relevant equipment try to earth yourself by touching a radiator or similar, avoid touching the legs of the device and try to work in a room that does not have a highly static flooring.
5. Take care when moving boards or leads that no wires become trapped as this may result in permanent damage to transformers etc.